

Car End Stop Control

Powered Line Driver, electrical connections

Revision no. 01

Last mod. 31/01/2023



For models 6320/12, 6320/24

Before you read this guide

The present installation and maintenance manual contains important information for the correct use of the Car End Stop Control and you are therefore advised to read it carefully before using the product.


The present manual gives technical information for the installation and the maintenance of the following models: 6320/12, 6320/24.

In case of technical queries, contact **antal@antal.it**.

Car End Stop Control

Important concepts



To avoid overloads due to wrong operations, the Car End Stop Control includes: two proximity switches and one end stop control unit. The car stops automatically at the the track ends.

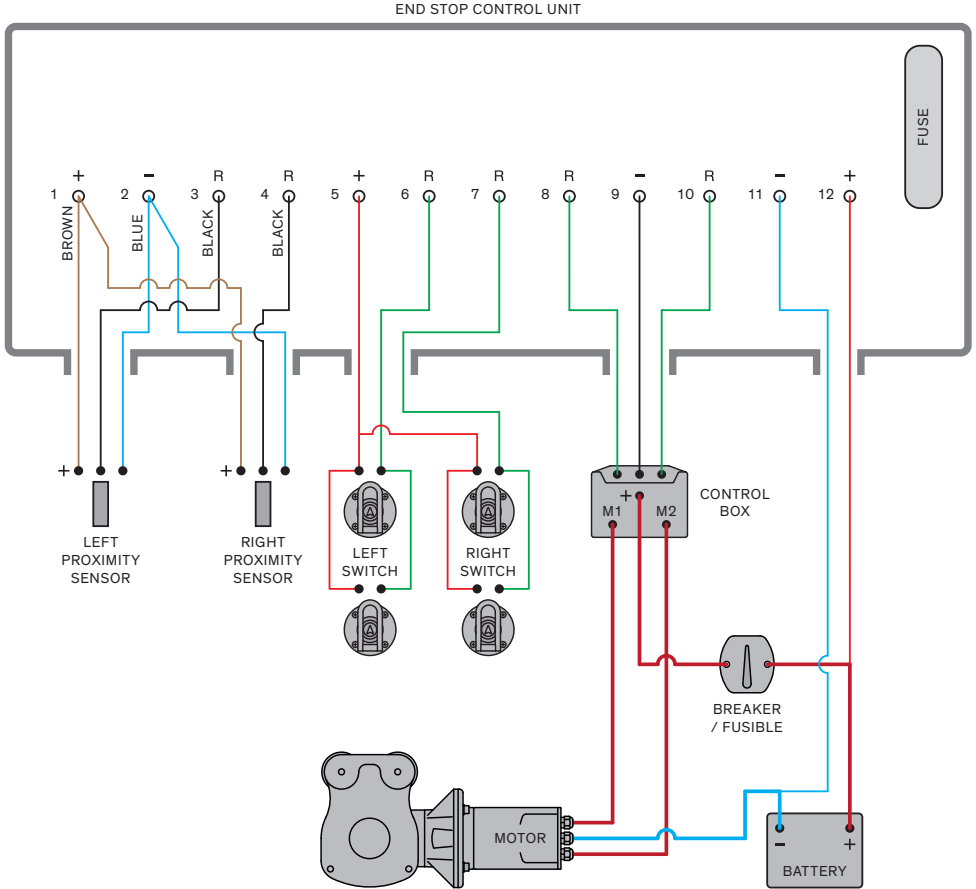

⚠ Caution. If the motor turns in the wrong direction exchange 8 with 10; never change 3 with 4 or 6 with 7!

L = overall car length
S = about 10 mm

Antal cars can be supplied with a S.steel plate that is necessary to activate the proximity sensor.

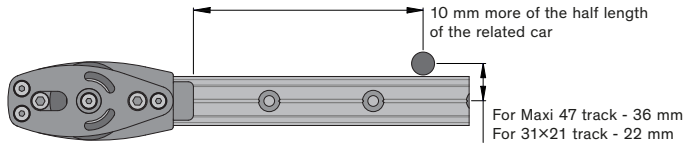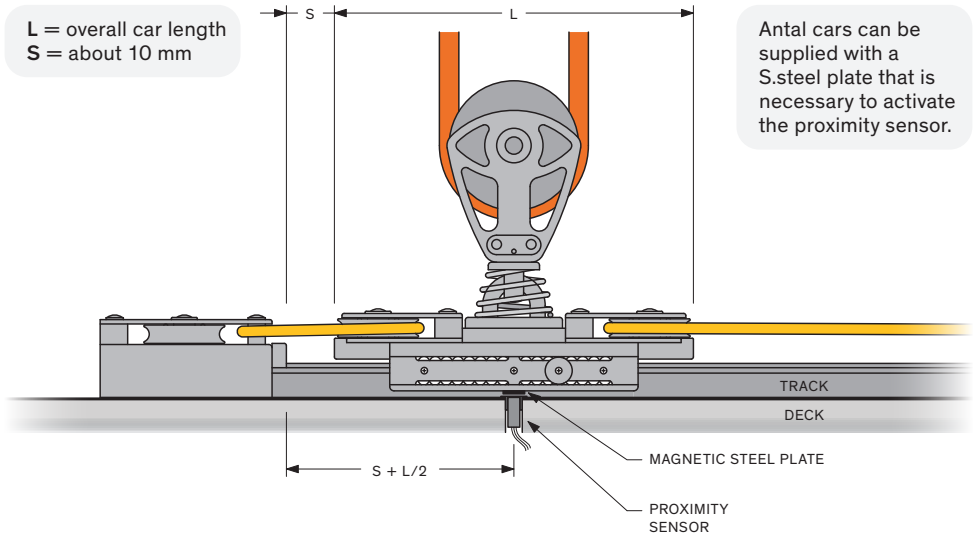

For mounting the proximity sensor drill a 16 mm hole and use silicon under the sensor cap.

